







acs
AFRICAN CORK SUPPLIERS

Installation Instructions for Wall tiles

- Mark out the centre of the wall drawing two perpendicular axes
- Select the position of the first cork tile starting from the point of intersection
- Apply one side adhesive using a notched trowel
- Spread the adhesive over the area you can cover with tiles within 15 to 20 minutes.
- Install the tiles immediately after spreading the adhesive.
- Check if there is a good adhesive transference to back of the cork tiles.
- Cut the tiles near the wall as indicated.
- Roll over the installed tiles. Do this once again upon completing the installation.
- Apply the contact adhesive on both surfaces.



acs
AFRICAN CORK SUPPLIERS

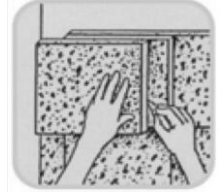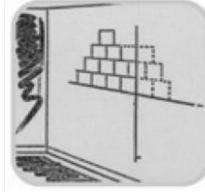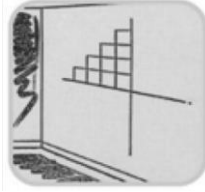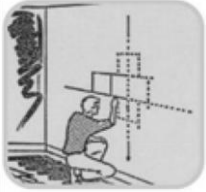

Recommended products

Contact adhesive – Genkem

Varnish – Polyurethane varnish